

# LED Flood Light 432/10RGB

This device is lighting effect which can create decorative effects, it is designed for professional use, e. g. on stages in disco club, theatres etc

## A. SPECIFICATION

432 super bright leds:

Red: 18X8 Green: 18X8 Blue: 18X8

Red: 30000mcd, Green: 30000mcd, Blue: 20000mcd

Led beam angle: 30degree

Projector output distance: 30~35m

2X8 character LCD Display

selectable built-in programs, Auto running, DMX mode , slave mode, sound-activated.

selectable 5. 8. 14. 26 DMX channel for different applications


Size: 54cm\*19cm\*7.5cm

Weight; 4.6g


Power in; 100V/240V 60HZ/50HZ

Power consumption; 50W

## B. 1,the picture of front side

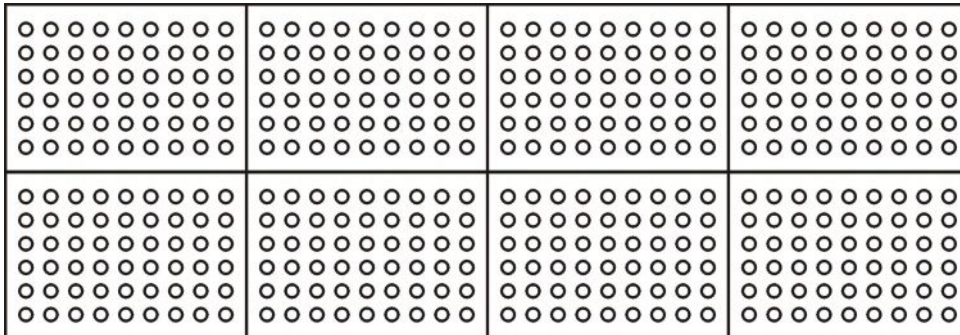

## 2, the picture of back side

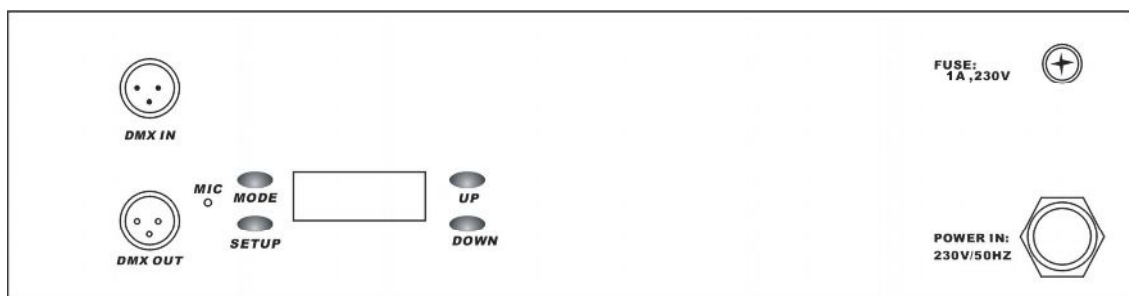

## C. OPERATION;

After opening the power, the LCD display will be as the follows:



Press "MODE"button to activate the main menu: built-in program, Auto run, DMX mode,

Slave mode, sound mode.

built-in program-- running one of 14 built-in programs

Auto run—running built-in programs one after another in continuous loop.

DMX mode--controlled by DMX controller

Slave mode—the projectors in this mode will be synchronously run with the projectors in master mode

Sound mode-- running by sound - activated

1. A program is a sequence of different steps, with LED flood light 432/10RGB you can select 14 different Programs. press "set up" and up/down buttons to select the programs (00-14) and select the desired program value (step time, flash).



02.SLOW D  
S001 F012

For example,

- Press "setup"button to move the cursor to select 02 and the desired Sp (step time) or Fs (flash speed)

Sp--step time value from 001-100

Fs--flash speed from 00-100

2. Auto run

Running 14 programs in a continuous loop, the frequency means the running times. it can be set up via the buttons up/down



AUTO RUN  
FQN:001

3. DMX mode

You can control the devices individually via your DMX-controller

#### 1) Addressing

The control Board allows you to assign the DMX address which is defined as the first channel from which the LED Flood light 432/10RGB will respond to the controller. For address setting, press "set up" buttons until the display shows as follows:



DMX MODE  
ADDR:001

Set the desired address via the up/down buttons

#### 2) DMX-PROTOCOL

The control Board allows you to set 5. 8. 14. 26 DMX channel for different applications.

press“set up”button until the display is as follows:



Set the desired channels (5. 8. 14. 26) via the up/down buttons

① set 26 channels

the dimmer occupies the first channel when DMX value is smaller than 251, the flash occupies the second channel, each spot occupies 3 channels, eight spots occupy 24 channels, and the projector occupy 26 channels.

<div>CH</div> <div>3-5</div>	<div>CH</div> <div>6-8</div>	<div>CH</div> <div>9-11</div>	<div>CH</div> <div>12-14</div>
<div>CH</div> <div>24-26</div>	<div>CH</div> <div>21-23</div>	<div>CH</div> <div>18-20</div>	<div>CH</div> <div>15-17</div>


②Set 14channels

The dimmer occupies the first channel when DMX value is smaller than 251, the flash occupies the second channel, every 2 spots occupy 3 channels, eight spots occupy 12 channels, the projector occupies 14 channels

<div>CH</div> <div>3-5</div>	<div>CH</div> <div>3-5</div>	<div>CH</div> <div>6-8</div>	<div>CH</div> <div>6-8</div>
<div>CH</div> <div>12-14</div>	<div>CH</div> <div>12-14</div>	<div>CH</div> <div>9-11</div>	<div>CH</div> <div>9-11</div>


③ set 8 Channels

the dimmer occupies the first channel when DMX value is smaller than 251, the flash occupies the second channel, every four spots occupy 3 channels, eight spots occupy 6 channels, the projector occupies 8 channels

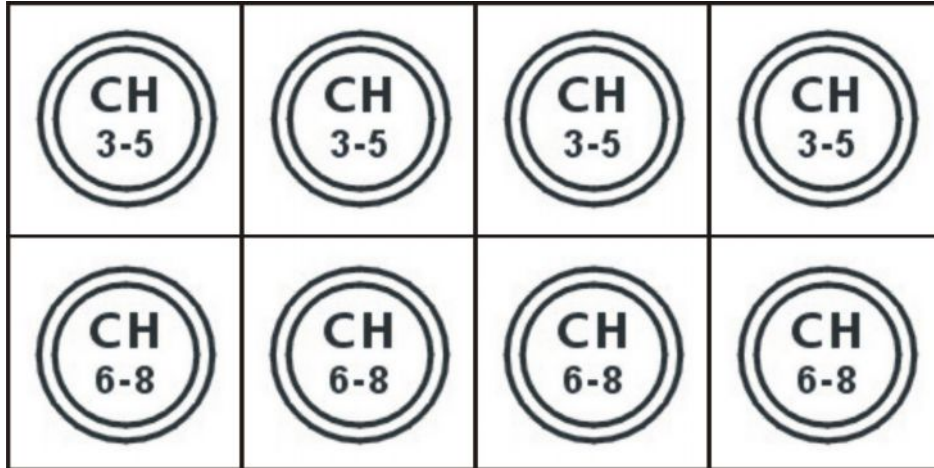

④ set 5 channels

The dimmer occupies the first channel when DMX value is smaller than 251, the flash occupies the second channel, eight spots occupy the same 3 channels, eight spots occupy 3 channels, the projector occupies 5 channels

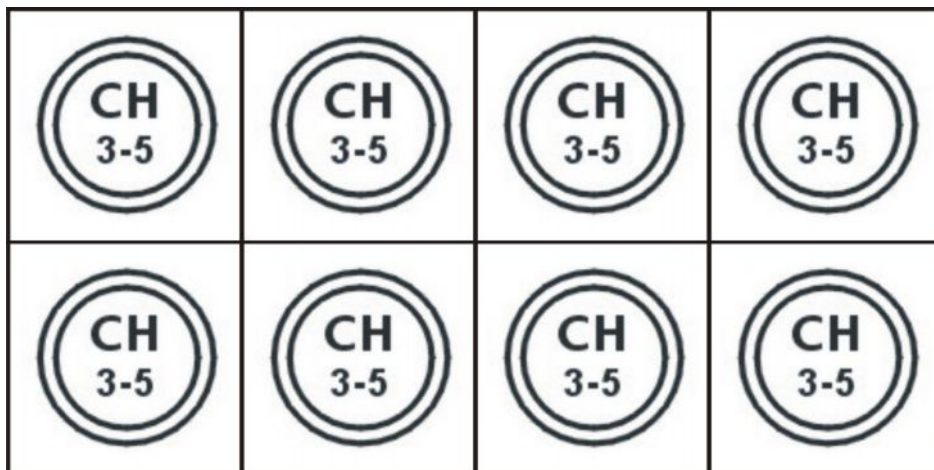

- ⑤ when during any one of the above three situations and the first channel DMX value is equal and more than 251 DMX protocol as follows:

CH1	CH2			CH3	CH4	CH5
251-255	MODE	DMX VALUE	FUNCTION	NO USE	FLASH 0-255 (0-28HZ)	NO USE
	1	0-10	BLACK OUT			
	2	11-21	RED			
	3	22-32	YELLOW			
	4	33-43	GREEN			
	5	44-54	CYAN			
	6	55-65	BLUE			
	7	66-76	PURPLE			
	8	77-87	WHITE			
	9	88-98	SLOW DREAM	Speed 0-255	FLASH 0-255 (0-28HZ)	NO USE
	10	99-109	FAST DREAM			
	11	110-120	COLOR FADE			
	12	121-131	COLOR CHANGE			
	13	132-142	FLOW1			
	14	143-153	FLOW2			
	15	154-164	FLOW3			
	16	165-175	FLOW4			
	17	176-186	DOUBLE FLOW1			
	18	187-197	DOUBLE FLOW 2			
	19	198--208	MULIT COLOR			
	20	209-219	2COLOR FLOW1	Speed 0-255	FLASH 0-255 (0-28HZ)	COLOR SORT 0-255
	21	220-230	2COLOR FLOW2			
	22	231-255	SOUND ACTIVE	Sensitivity 0-255 (32 grade)	NO USE	NO USE

4 . slave mode

5 . sound mode

SOUND  
SENS:31

Adjust the sound level by pressing 'up/down' button. The grade is 0-31.